CONTROL PANEL PARTS

For Model: SF367PEYW4, SF367PEYN4

(White) (Almond)

30" GAS
FREESTANDING RANGE
ELECTRONIC IGNITION
SELF− CLEAN OVEN
SEALED BURNER

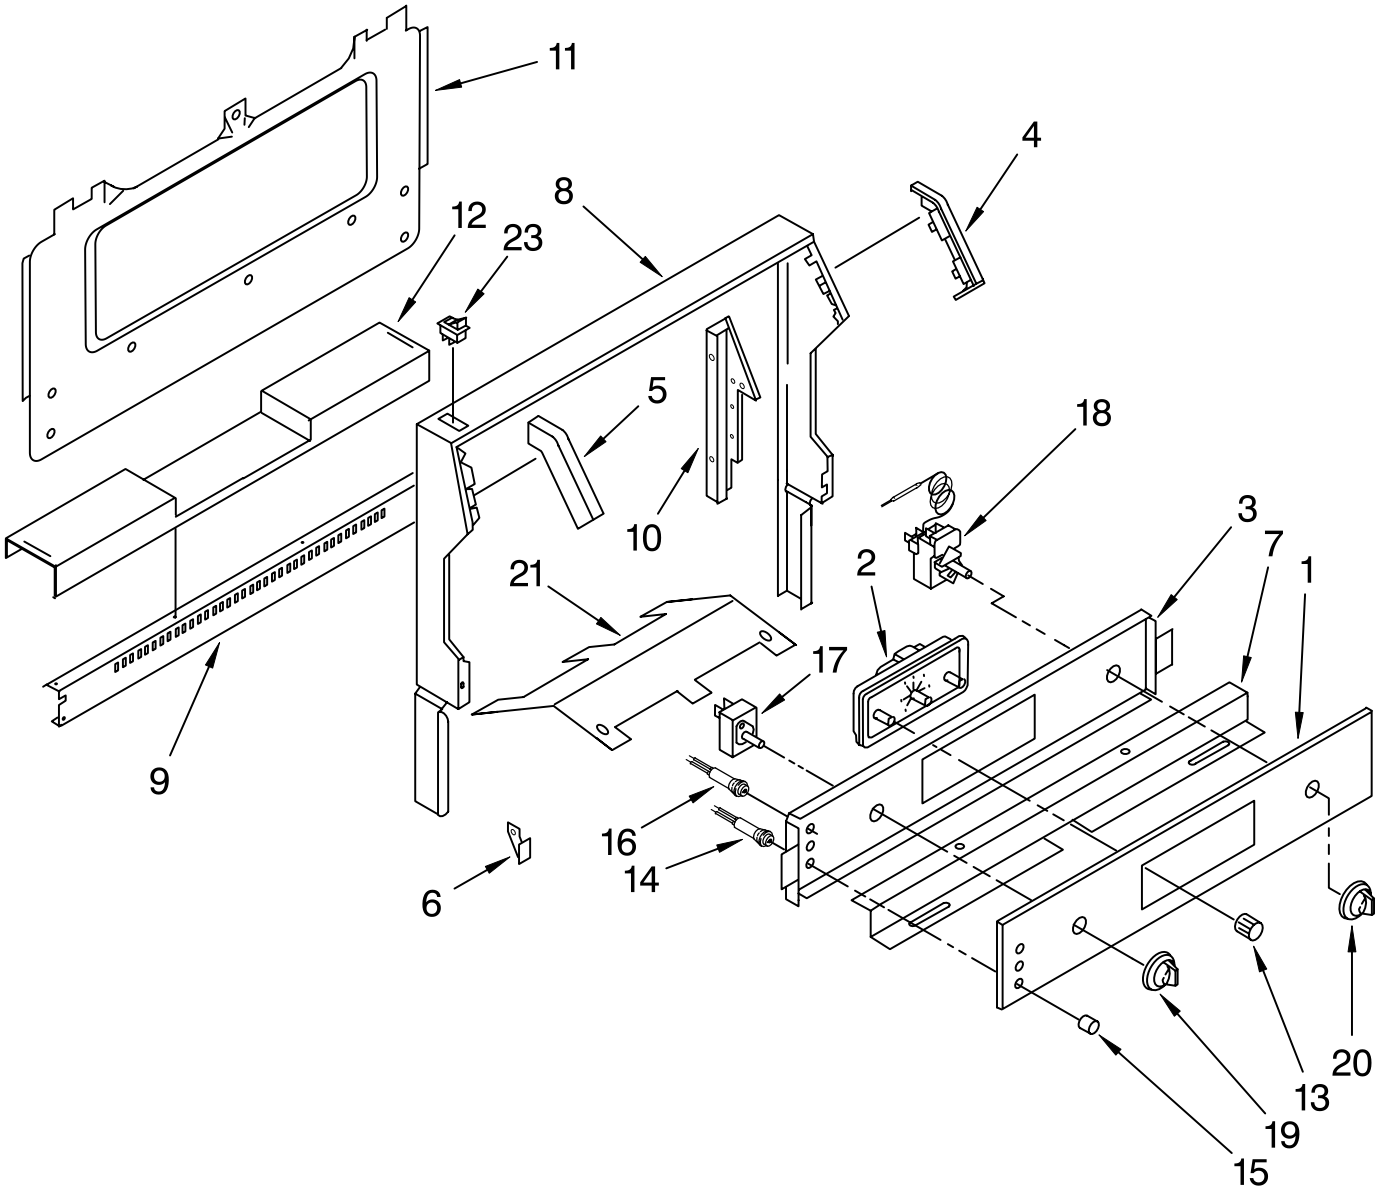

Illus. No.	Part No.	DESCRIPTION
1	4371692	Panel, Control
2	4371656	Clock, Timer
3	4371538	Bracket, Timer
4	4371316	Endcap, RH
5	4371317	Endcap, LH
6	4371536	Cap, Filler
7	4371320	Retainer, Timer
8	4371534	Trim, Wrapper
9	4371535	Trim, Deflector
10		Support,Backguard
	4372307	R.H.
	4372308	L.H.
11	4371619	Shield, Rear Wall
12	4371537	Deflector, Flue
13	816480	Knob, Clock (3)
14	4371626	Light,Indicator(2)
15	4372340	Lens, Ind Light(3)
16	4371627	Light, Indicator
17	4371629	Switch, Selector
18	4371630	Thermostat
19	4371657	Knob, Selector
20	4371658	Knob, Thermostat
21	4371655	Shield,Inner Bkgd
23	816703	Switch, Light

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

COOKTOP PARTS

For Model: SF367PEYW4, SF367PEYN4

(White) (Almond)

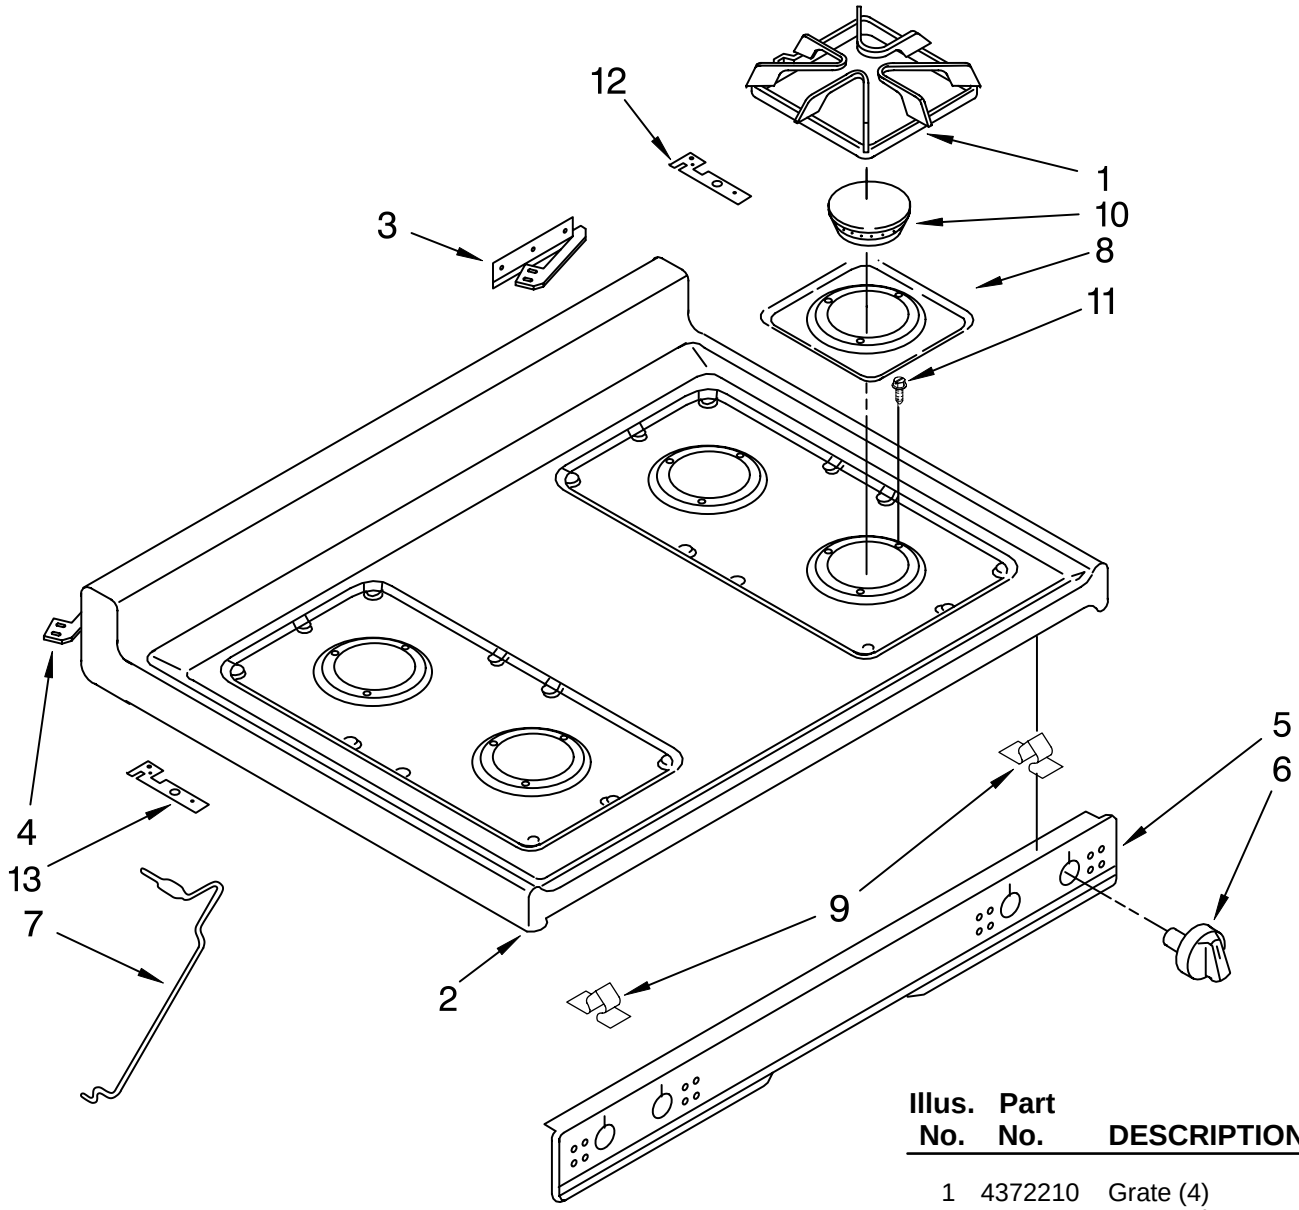

Illus. No.	Part No.	DESCRIPTION
1	4372210	Grate (4)
2		Top, Main
	4371697	White
	4371698	Almond
3	4371545	Bracket, Hinge RH
4	4371546	Bracket, Hinge LH
5	4371683	Panel, Manifold
6	4371663	Knob, Control (4)
7	4371541	Rod, Support Top
8	4371691	Pan, Burner (4)
9	816612	Clip, Spring (2)
10	4371684	Cap, Burner
11	4371589	Screw, Burner Mtg
12	4371591	Bracket, Mtg RH
13	4371592	Bracket, Mtg LH

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

COOKTOP BURNER PARTS

For Model: SF367PEYW4, SF367PEYN4

(White) (Almond)

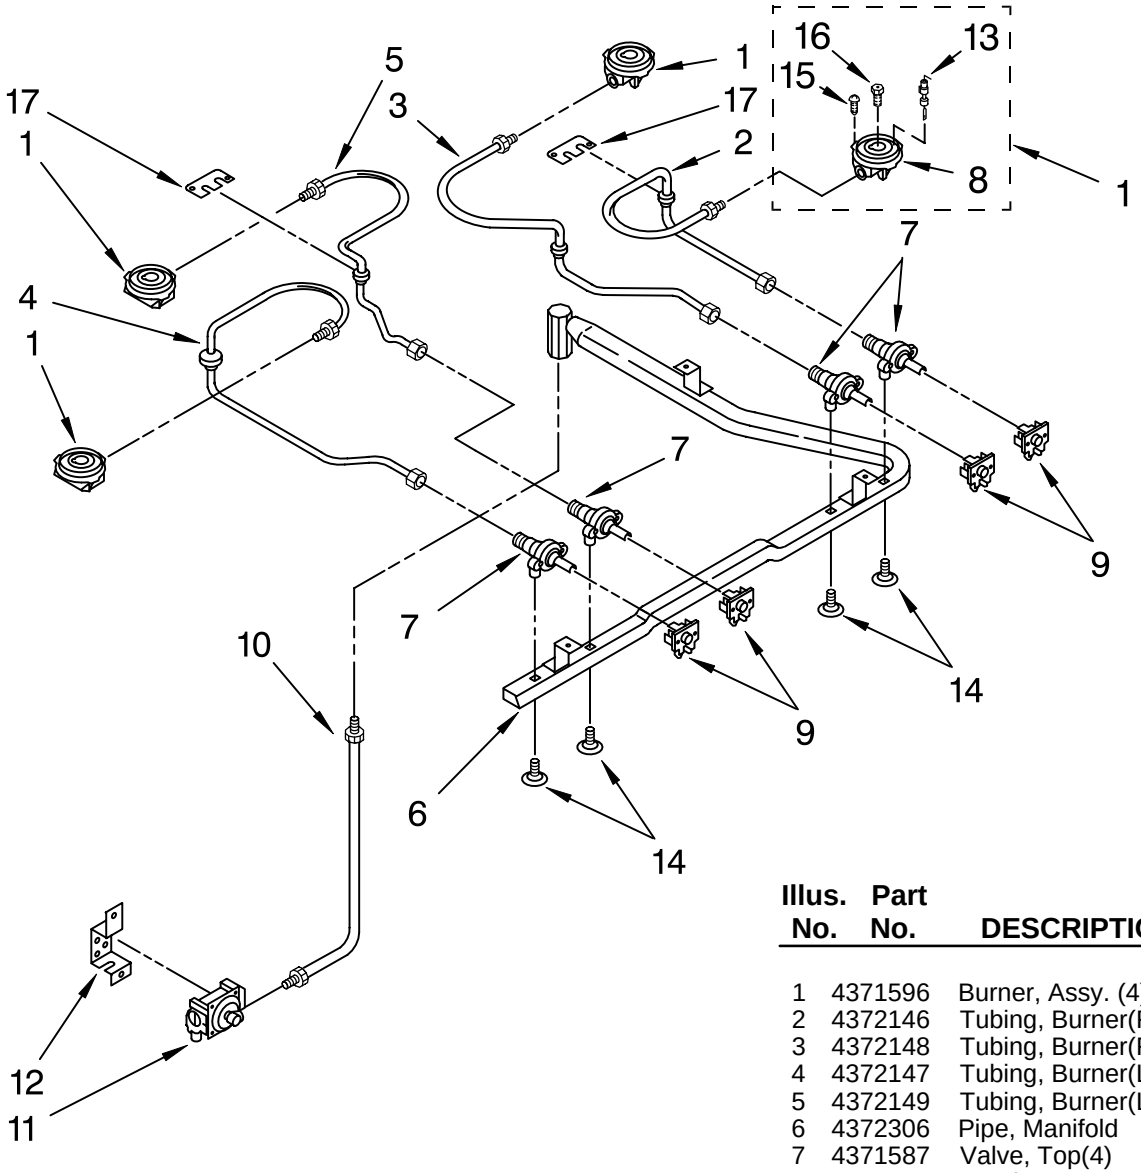

Illus. No.	Part No.	DESCRIPTION
1	4371596	Burner, Assy. (4)
2	4372146	Tubing, Burner(RF)
3	4372148	Tubing, Burner(RR)
4	4372147	Tubing, Burner(LF)
5	4372149	Tubing, Burner(LR)
6	4372306	Pipe, Manifold
7	4371587	Valve, Top(4)
8	4371597	Head, Burner
9	4371164	Switch, Ignitor(4)
10	4372316	Tubing, Regulator To Manifold Pipe
11	4372040	Regulator,Pressure
12	816636	Bracket, Regulator
13	4371598	Bracket & Electrode
14	4371858	Screw, Valve Mtg.
15	4371599	Screw, Electrode
16	816567	Orifice
17	816602	Plate,Burner Tube

OPTIONAL PARTS NOT INCLUDED

4372091	Gas Conversion Kit (Natural Gas To LP Gas)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

BROILER & OVEN BURNER PARTS

For Model: SF367PEYW4, SF367PEYN4

(White) (Almond)

Illus. No.	Part No.	DESCRIPTION
1	816582	Baffle, Broiler Burner
2	816584	Baffle, Oven Burner
3	816722	Burner, Broiler
4	816588	Burner, Oven
5	816624	Ignitor, Broiler Burner
6	816625	Ignitor, Oven Burner
7	4371583	Ignitor, Module
8	816594	Mixer, Elbow
9	4372314	Tubing, Valve To Mixing Elbow
10	816692	Valve, Safety
11	4372315	Tubing, Valve To Regulator
12	816642	Nut, Hex (2)

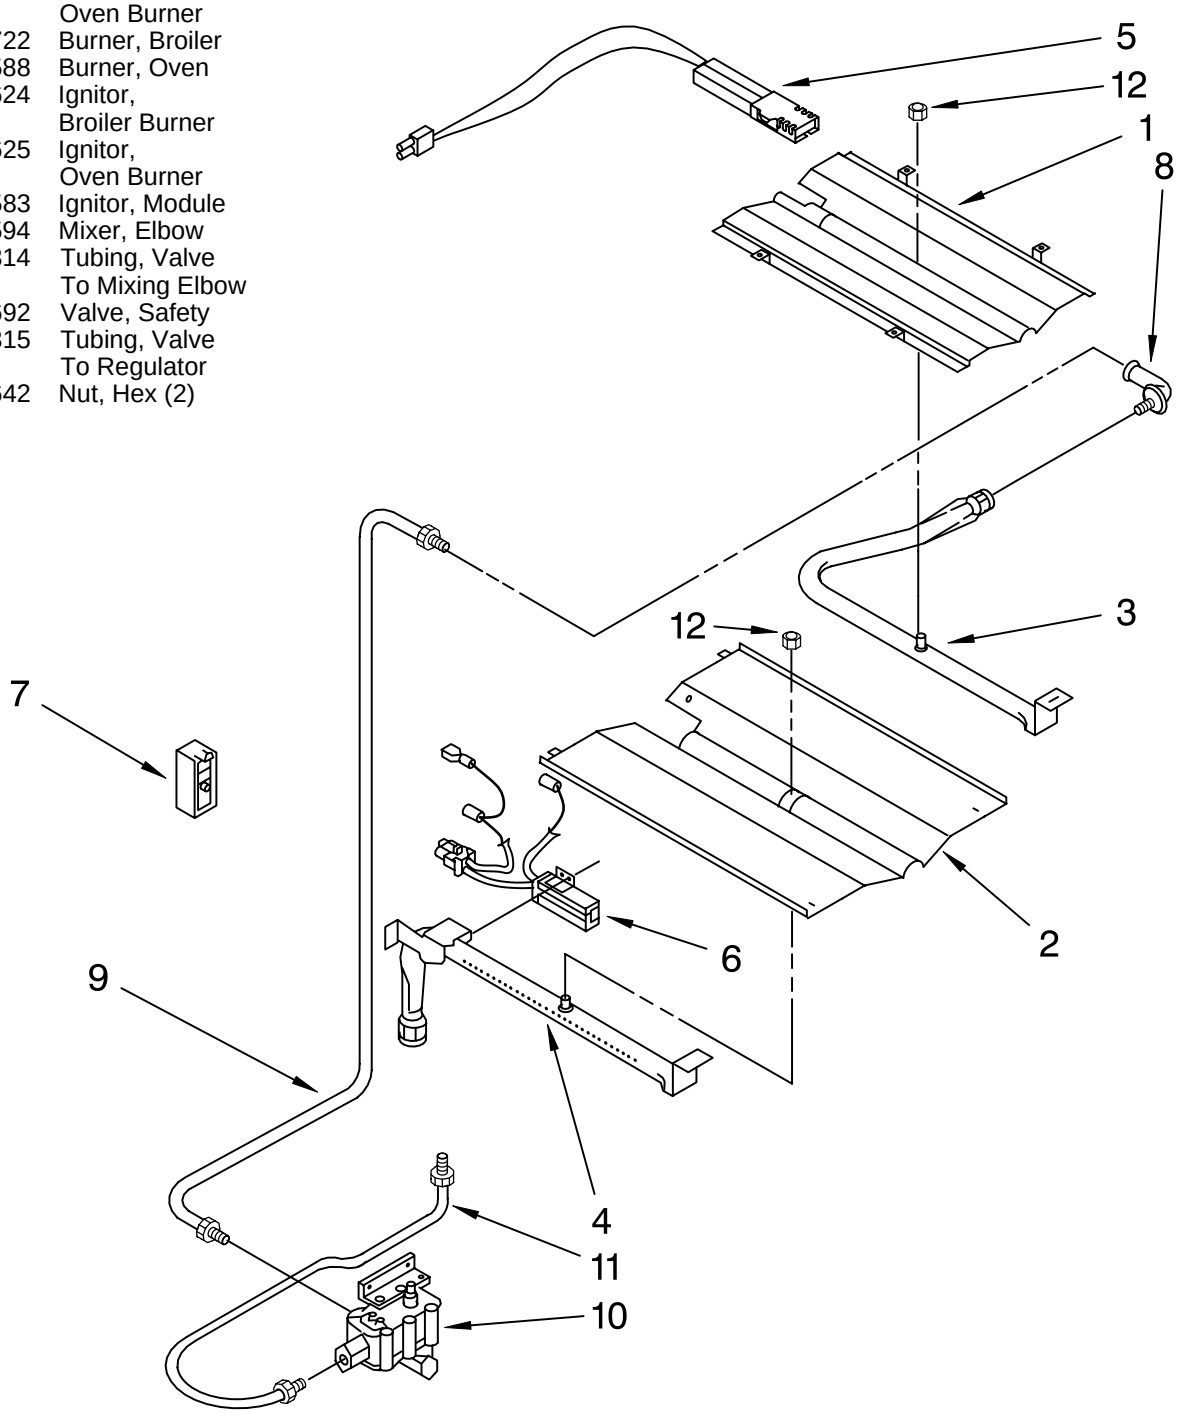

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN PARTS

For Model: SF367PEYW4, SF367PEYN4

(White) (Almond)

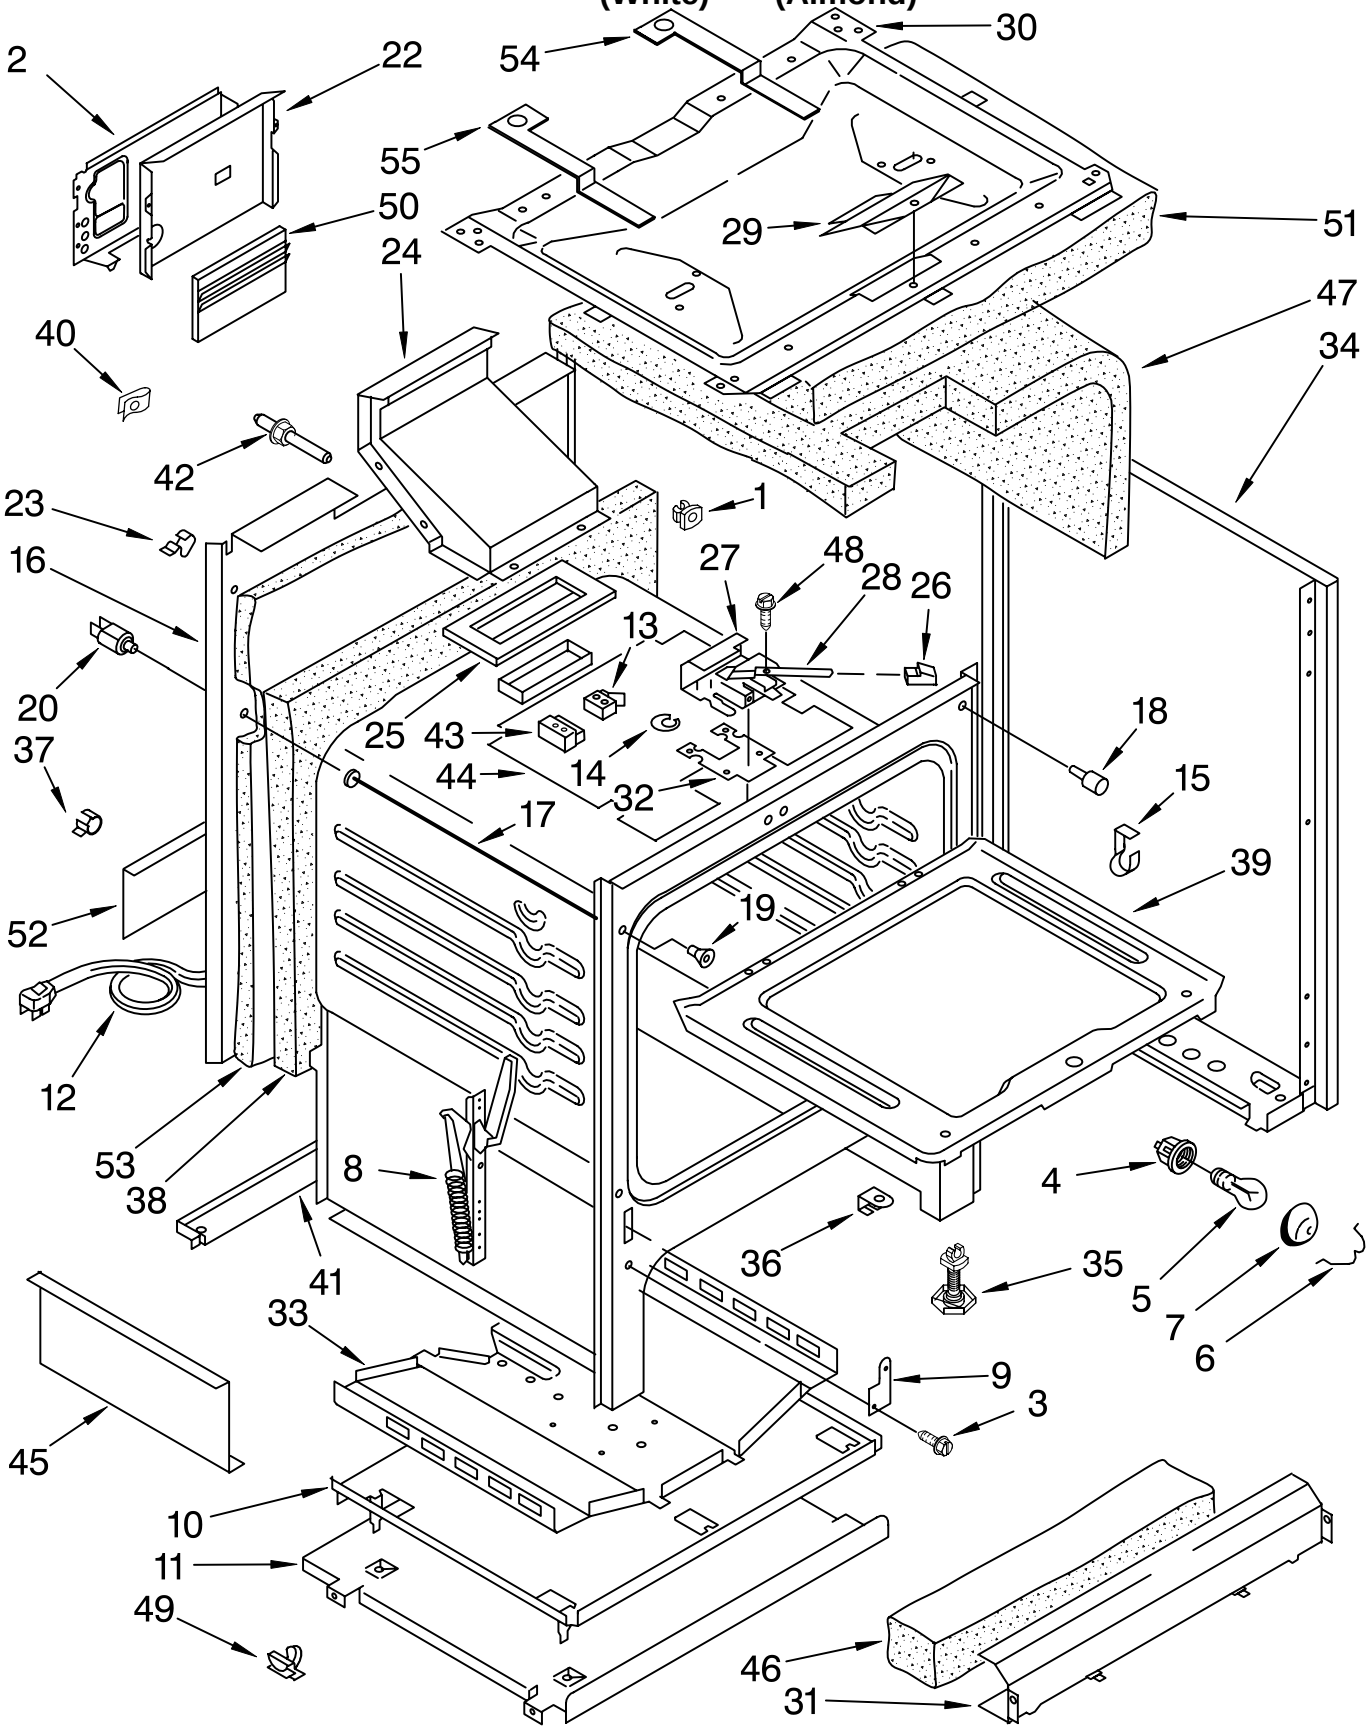

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN PARTS

For Model: SF367PEYW4, SF367PEYN4

(White) (Almond)

Illus. No.	Part No.	DESCRIPTION
1	816669	Spacer, Body (8)
2	816659	Shield, Rear Wall
3	816651	Screw, Oven Bottom
4	816668	Socket, Oven Lamp
5	4371303	Bulb, Oven Light
6	4371621	Retainer, Lens
7	816609	Lens, Oven Light
8	4371143	Hinge, Oven Door
9	816617	Cover, Hinge
10	4371042	Shield, Heat (Upper)
11	816657	Shield, Heat (Lower)
12	816614	Cord, Power
13	816640	Switch, Latch
14	816633	Fastener, Push−On
15	4371482	Clip, Thermo Bulb
16	4372290	Back, Main
17	4372288	Rod, Light
18	816608	Bumper, Front (4)
19	4371682	Cover, Rod End
20	4372289	Switch, Door
22	4371661	Shield, Rear Heat
23	816577	Clip, Wire
24	4371652	Flue Box
25	816620	Gasket, Flue
26	4371144	Knob, Latch
27	4371036	Latch, Door
28	4371265	Handle, Latch
29	816615	Cover, Plate
30	4372310	Burner Box
31	816776	Shield, Main Front
32	816638	Shield, Latch
33	816660	Shield, Heat Baffle
34		Panel, Side
	816709	White
	816708	White
	816695	Almond LH
	816672	Almond RH
35	4371909	Screw, Leveler (4)
36	4372313	Support, Oven Bottom
37	816618	Fastener, Cord
38	4372312	Insulation, Oven Back
39	4372245	Bottom, Oven
40	4371033	Fastener, U Type
41	816585	Bracket, Anti Tip
42	816639	Spacer, Stud (2)
43	816637	Shield, Latch
44	816658	Shield, Oven Top
45	816648	Shield, Side(2)
46	816627	Insulation, Front
47	816629	Insulation, Oven Wrapper
48	4371664	Screw, Latch
49	816621	Glide, Drawer
50	4371662	Shield, Flue
51	816628	Insulation, Ov Top
52	816663	Shield, Wire
53	816664	Shield, Wool
54	4371527	Bracket,Maintop RH
55	4371528	Bracket,Maintop LH

OVEN RACK PARTS

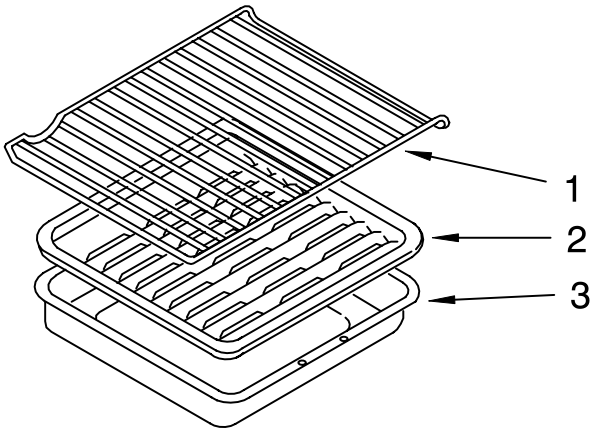

Illus. No.	Part No.	DESCRIPTION
1	4371483	Rack, Oven (2)
2	816626	Insert, Broiler Pan
3	816644	Pan, Broiler

LITERATURE PARTS

LIT4372204	Use & Care Guide
LIT4372196	Installation Instructions

DOOR AND DRAWER PARTS

For Model: SF367PEYW4, SF367PEYN4

(White) (Almond)

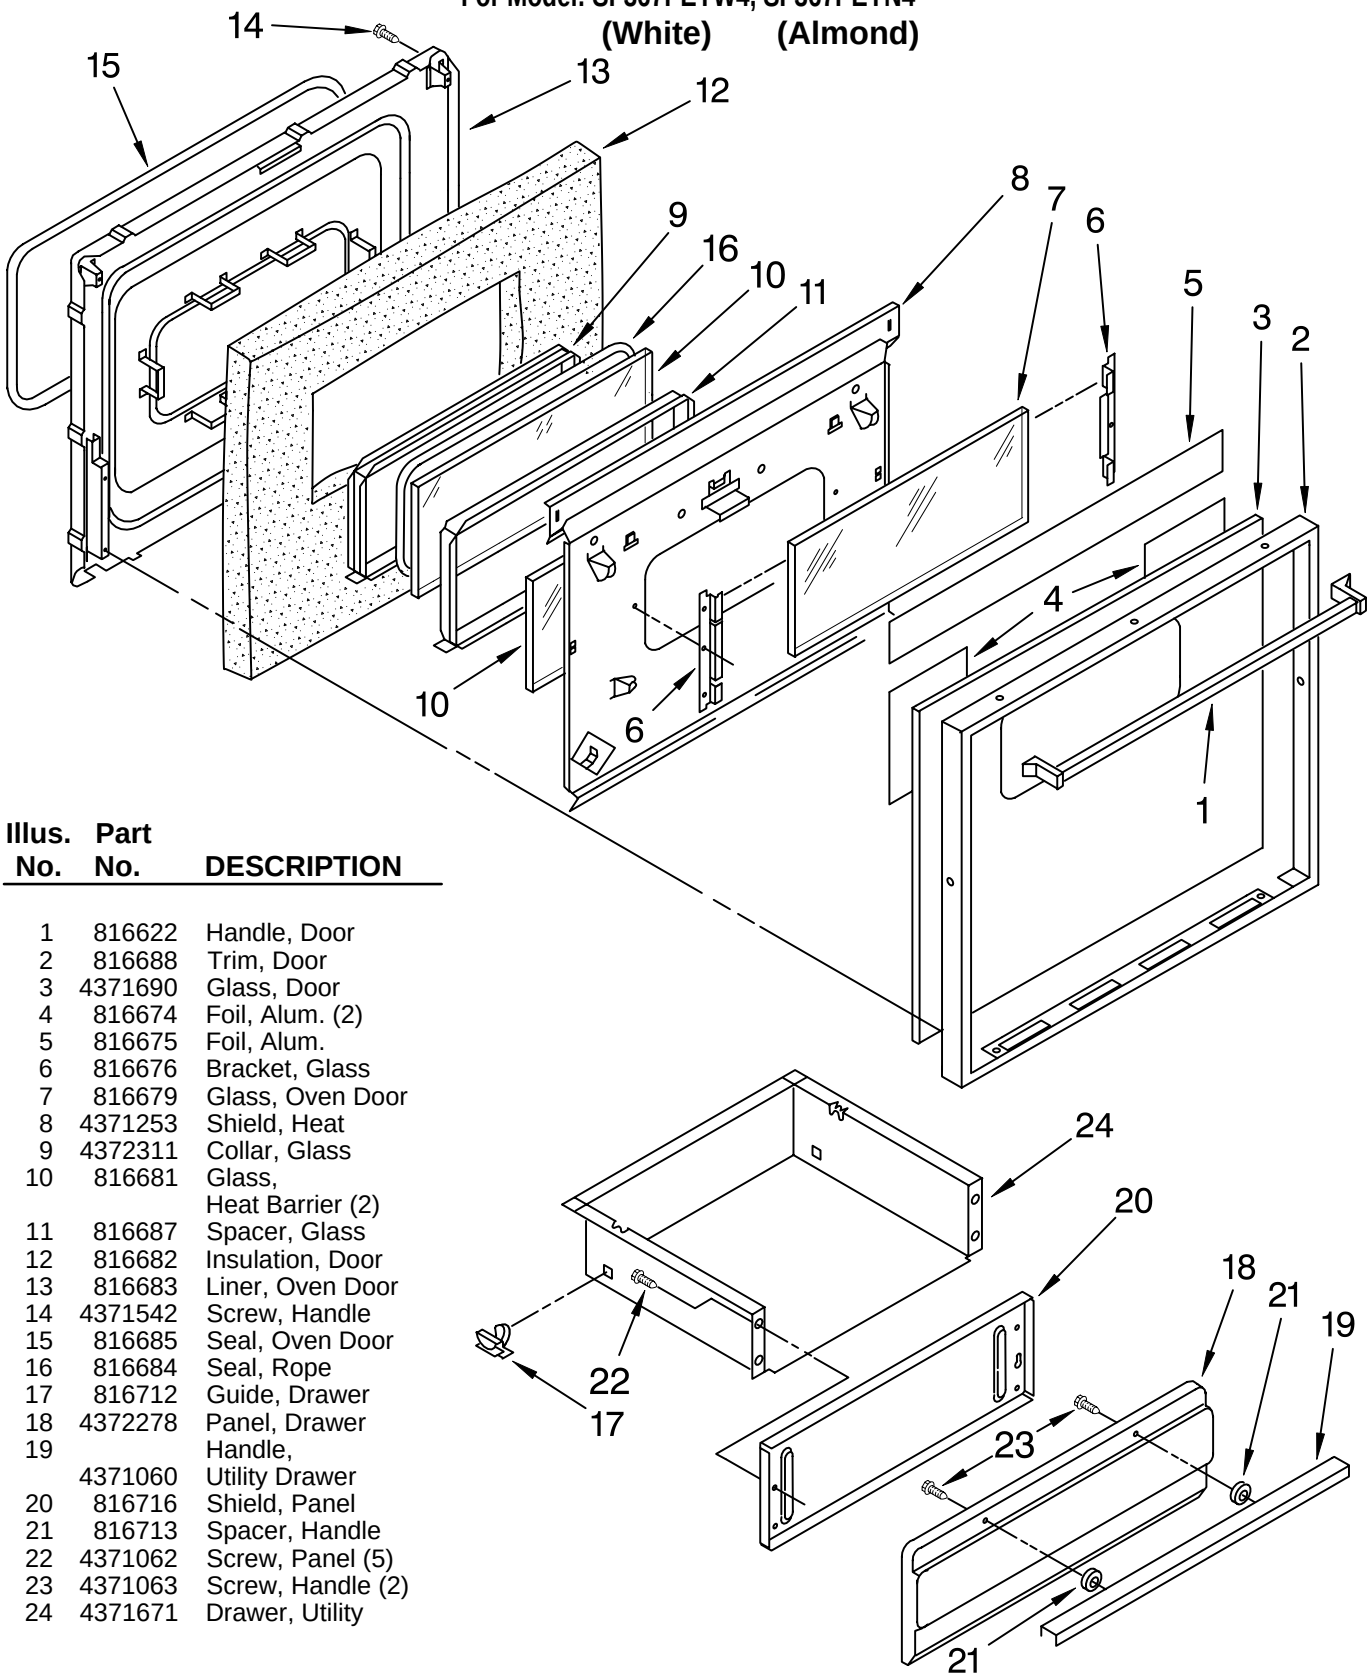

Illus. No.	Part No.	DESCRIPTION
1	816622	Handle, Door
2	816688	Trim, Door
3	4371690	Glass, Door
4	816674	Foil, Alum. (2)
5	816675	Foil, Alum.
6	816676	Bracket, Glass
7	816679	Glass, Oven Door
8	4371253	Shield, Heat
9	4372311	Collar, Glass
10	816681	Glass, Heat Barrier (2)
11	816687	Spacer, Glass
12	816682	Insulation, Door
13	816683	Liner, Oven Door
14	4371542	Screw, Handle
15	816685	Seal, Oven Door
16	816684	Seal, Rope
17	816712	Guide, Drawer
18	4372278	Panel, Drawer
19	4371060	Handle, Utility Drawer
20	816716	Shield, Panel
21	816713	Spacer, Handle
22	4371062	Screw, Panel (5)
23	4371063	Screw, Handle (2)
24	4371671	Drawer, Utility

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST